

DENON®

PMA-800NE

INTEGRATED AMPLIFIER

Quick Start Guide

Guide de démarrage rapide / Guía de inicio rápido

Read Me First....

Lisez-moi en premier.... / Lea esto primero....

ENGLISH

FRANÇAIS

ESPAÑOL

Welcome

Thank you for choosing a Denon amplifier.
This guide provides step-by-step instructions for setting up your amplifier.

Please do not return this unit to the store – call for assistance.

If you need help... :

If you need additional help in solving problems, contact Denon customer service in your area.
For details, see the Denon homepage.
www.denon.com

Before You Begin

What's In the Box

Quick Start Guide		Integrated Amplifier	
CD-ROM (Owner's Manual)		Remote control unit (RC-1223)	
Safety Instructions		R03/AAA batteries	
Warranty (for North America model only)			

Required for Basic connections

			
CD player	Speaker systems	Speaker cables	Audio cable




- These drawings are for illustrative purposes only and may not represent the actual product(s).

Setup


There are five steps to the setup process.

- 1** Install batteries in the remote control unit
- 2** Connect the speakers to the amplifier
- 3** Connect the CD player to the amplifier
- 4** Plug the power cord into a power outlet
- 5** Begin CD playback

1 Install batteries in the remote control unit

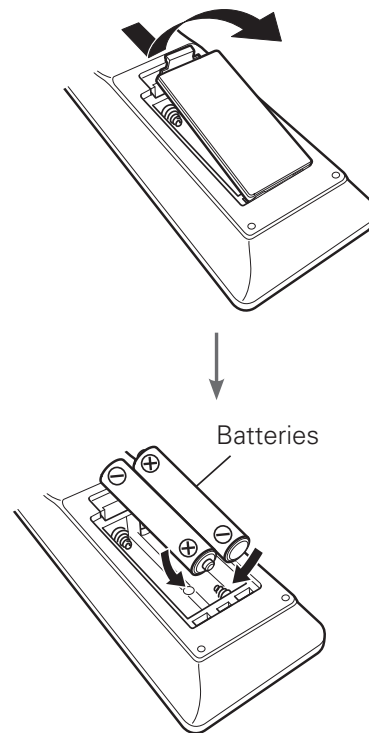

2 Connect the speakers to the amplifier

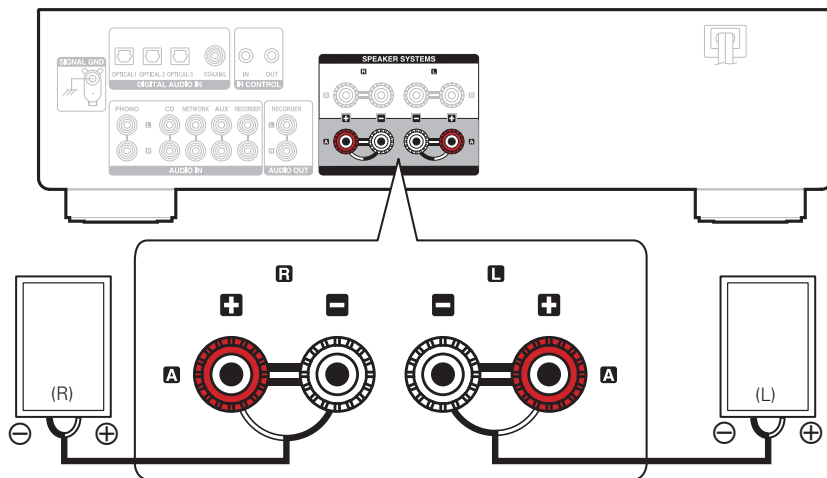

Connecting the speaker cables

 
① Peel off about 3/8 inch (10 mm) of sheathing from the tip of the speaker cable, then either twist the core wire tightly or apply solder to it.



② Turn the speaker terminal counterclockwise to loosen it.




③ Insert the speaker cable's core wire to all the way into the speaker terminal.




④ Turn the speaker terminal clockwise to tighten it.




3 Connect the CD player to the amplifier

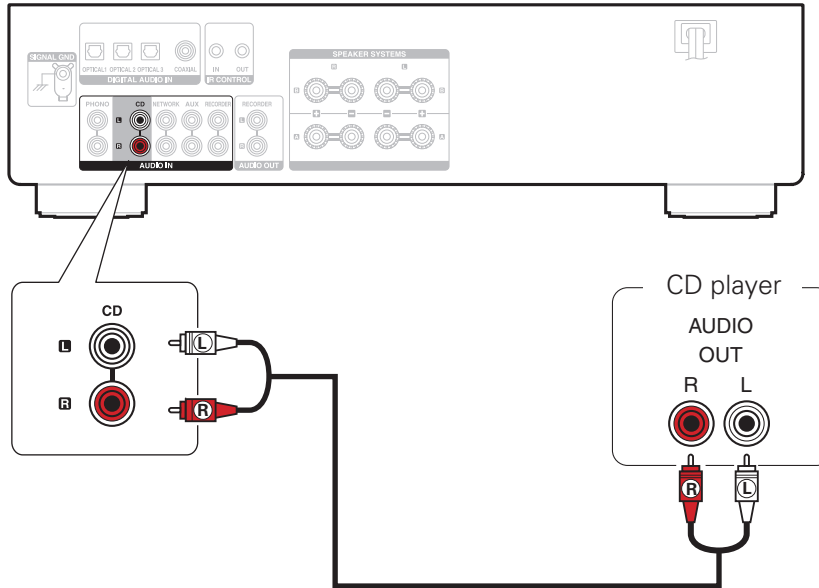


4 Plug the power cord into a power outlet

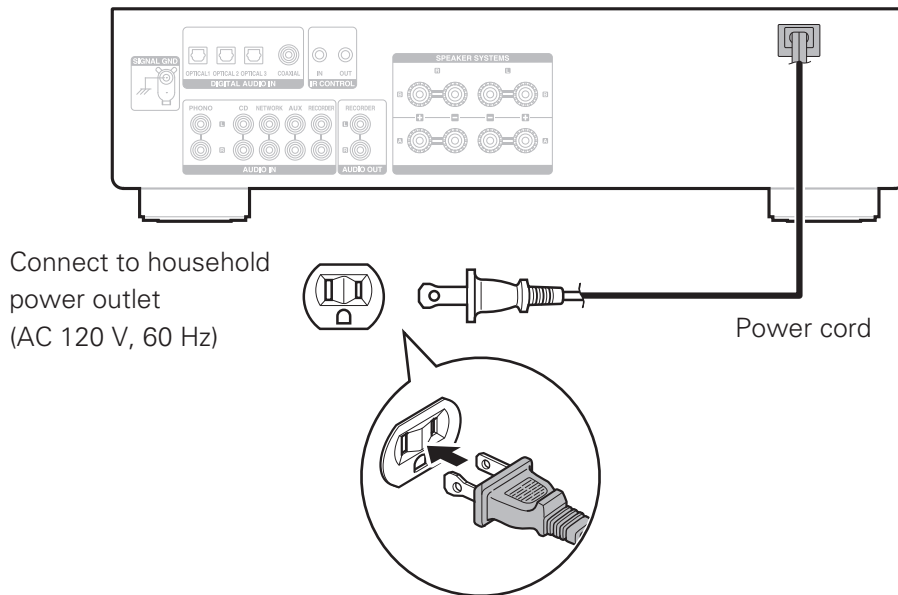

5 Begin CD playback

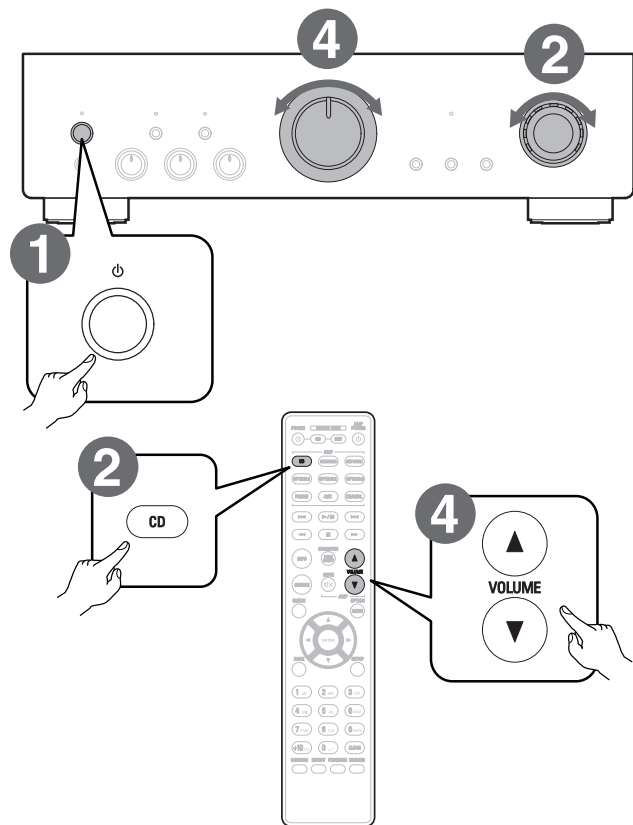

- 1 Press the power operation button.**
Turn VOLUME on the main unit to adjust the volume to the lowest level before turning on the power.
- 2 Set the input source to "CD".**
The "CD" input indicator lights.
- 3 Play the CD player.**
- 4 Adjust the volume.**

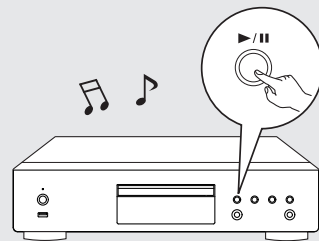

Owner's Manual

Please reference to the Owner's Manual for more details about the setup and operation of the amplifier and its features.

❑ Online Version

Enter the following URL into your web browser:
manuals.denon.com/PMA800NE/NA/EN/



Online Manual




❑ Printable Version

Access the print version of the owner's manual from the included CD-ROM or select the "PDF Download" link from the Online Version.

1

Insert the disc into your PC.

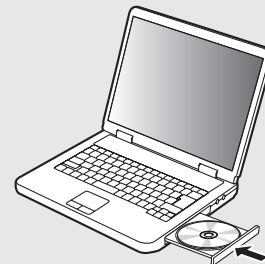

2

Follow the screen or double click on the PDF file.

DENON®
www.denon.com

Printed in Vietnam 5411 11664 00AD
Copyright © 2018 D&M Holdings Inc. All Rights Reserved.